


## 4-Position Memory Control



### Schematic

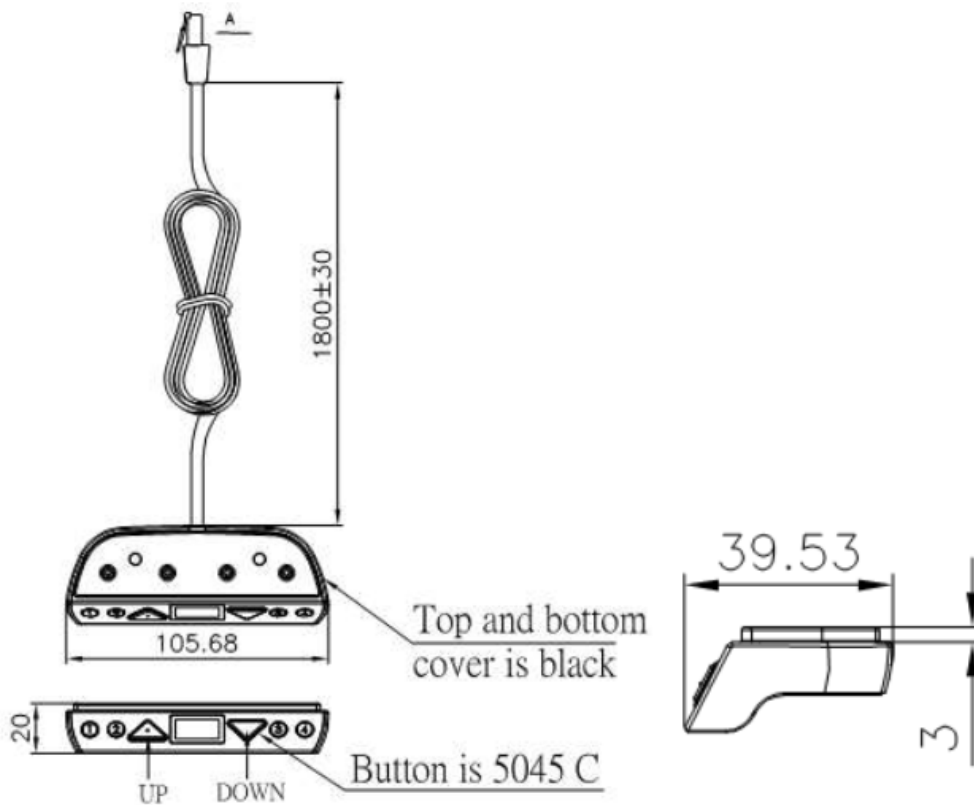

### **RESET *\*\*\*PERFORM RESET BEFORE 1<sup>ST</sup> USE\*\*\****

- Press both ▲ and ▼ buttons at the same time until both columns are in lowest position.
- Display will show "000" while conducting reset.
- When control box beeps, the buttons can be released and reset is complete.

## **NORMAL OPERATION**

- Press any button and display shows current height in centimeters (cm).
- Press ▲ or ▼ button to adjust the height.
- When no button has been pressed for 30 seconds, the system goes to <0.1 W standby mode, and the display turns off. Press any button to wake the system and display the current base height.

## **CHANGING STARTING HEIGHT**

- The default starting height is 65cm.
- To adjust the starting height, press ▼ button until reaching lowest position. At the lowest position, press ▼ button again for 5 seconds until display starts flashing for 10 seconds.
- During this time, press ▲ or ▼ buttons to adjust height to preferred starting position, and then press ▲ and ▼ buttons together for 3 seconds to store this position.
- Display stops flashing and the new starting height is shown in the display.



## **SETTING & USING MEMORY PRESET POSITIONS**

- Operate the desk to preferred height.
- Press any of ①②③④ together with ▲ or ▼ for 2 seconds to store the current height. Display shows P1/P2/P3/P4 when the position has been stored.
- To return table/desk to a stored position, hold the memory preset button ①②③④ until the desk reaches the stored height.
- Memory presents can be overwritten with a new position at any time. Positions are removed, only overwritten.

